Assembly Instruction Manual

ZP055055-5FT ANMTD UPSIDEDOWN JACKOLNTRN THE CLWN



CARE AND MAINTENANCE

- For best performance operate your item. When not in use, store this product in its original package.
- Keep away from heat and moisture.

⚠ SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

DANGER

The item should not be grabbed or pushed, as it becomes a tipping hazard. Keep away from the adapter, as it heats up during operation.

⚠ WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children. For indoor use.

1. Please use the adapter supplied by the manufacturer.
2. Please assemble the item according to the instructions. Connect all wires according to their matching color.
3. Usage near children should be supervised by adults.
4. Keep away from open flames.
5. Do not expose this product to any liquids, vapor or rain.
6. Don't climb or pull on the product.
7. Don't add to or modify product.
8. Assemble and place the product on level surfaces only.
9. Don't push or tilt product.
10. Do not plug in the power adapter until assembly is completed.


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

PACKAGE CONTENTS


A. Base x 1
B. Support Poles x 2
C. Right Hand x 1
D. Left Hand x 1
E. Foam Tubes x 2
F. Custome x 1
G. Lower Support Frame x 1
H. Upper Support Frame x 1
I. Right Leg x 1
J. Left Leg x 1
K. Pumpkin Head x 1
L. Clown Head x 1
M. Hat x 1
N. Adapter x 1




1

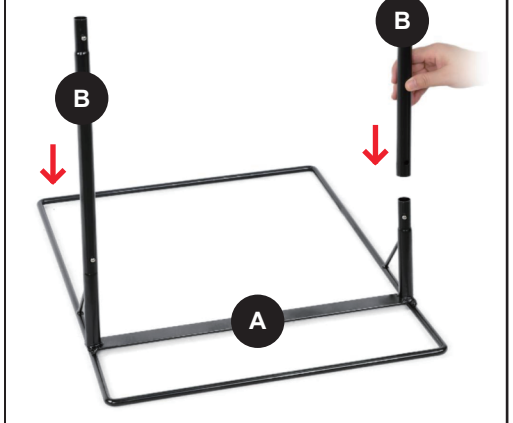


2

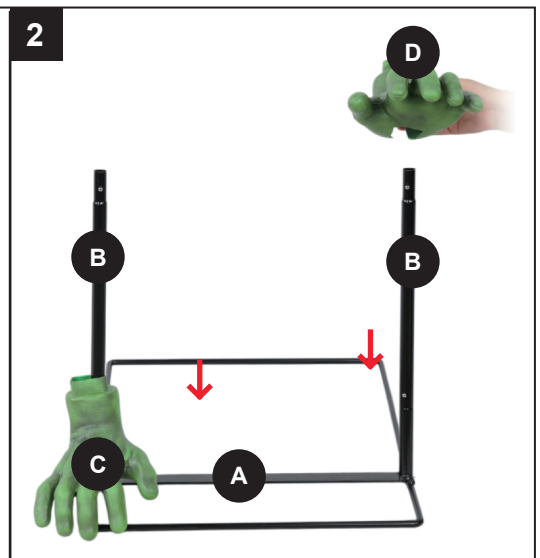


3

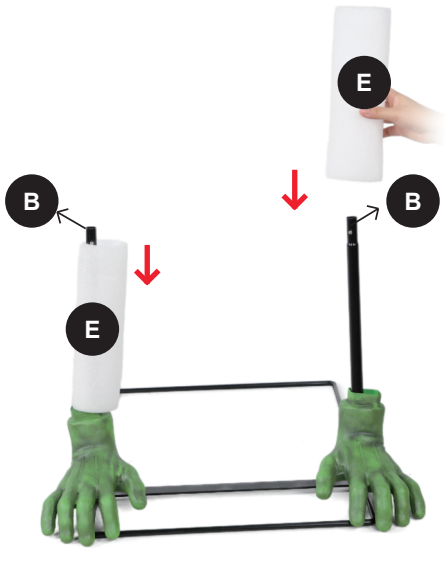

4 Note: Face the sensor-equipped side of (F) costume forward.

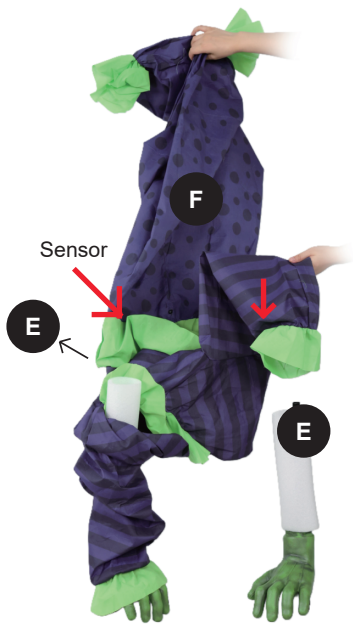

5

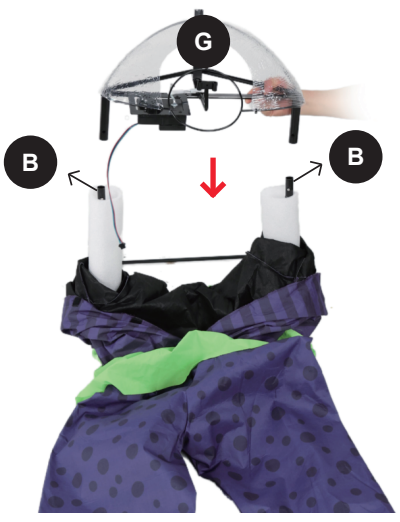

6 Turn (H) upper support frame upside down, insert the two poles into trouser legs of (F) costume.



7 Connect (H) upper support frame to (G) lower support frame.



8 Note: Pull down the two trouser legs until the two poles on (H) upper support frame are fully exposed.




9



10






11



12




13 **Connect all the cables by color and insert (N) adapter into the control box power port.**

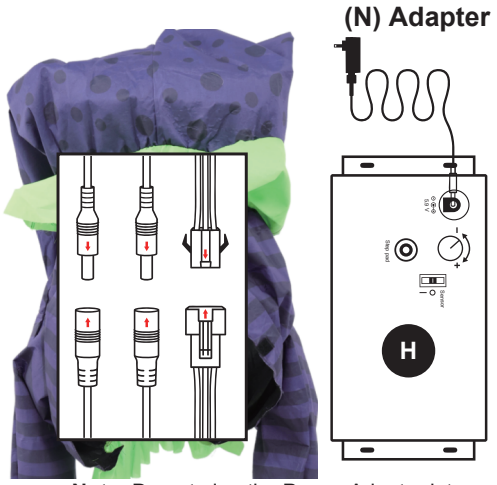


Note: Do not plug the Power Adapter into power outlet until item assembly is completed.

14

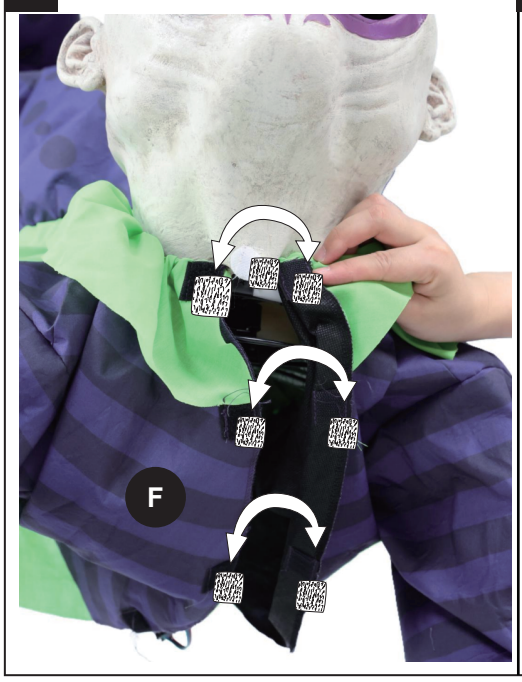

15

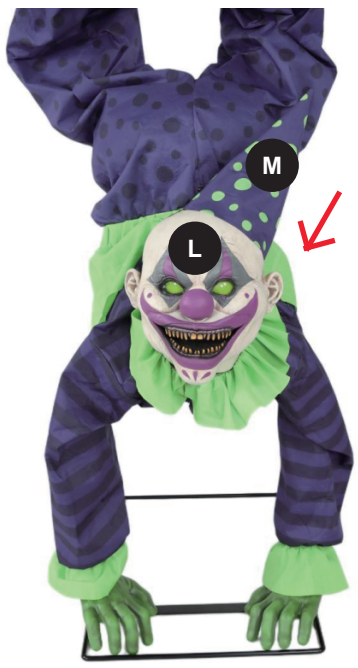


OPERATING INSTRUCTIONS

1. Plug the power adapter into a standard power outlet and adjust the settings on the function control box, located on the (H) upper support frame, as desired.

2. Settings:

Sensor	This switch mode will activate lights, sound and animation when the Infra-red (IR) sensor is activated and will operate for 1 audio-cycle with each activation. The Infra-red (IR) sensor has a range of up to 2 m/6.5ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.
○ (Off/TryMe)	This switch mode allows the item to be activated only if triggered by using a Try Me button (Not Included). The item will operate for one audio cycle with each Try Me activation.
| (On/Timer)	This switch mode also operate the lights, sound and animation of the item with a timer setting to be on for 6 hours, off for 18 hours and then repeat the cycle.
	Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off.

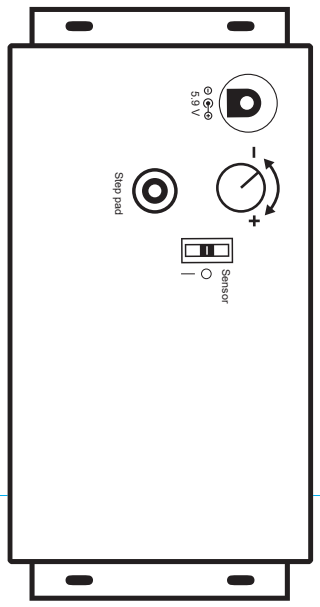

STORAGE INSTRUCTIONS

1. Carefully place all components into shipping box and/or provided container and tape it shut.
2. When not in use, please store your item in a cool, dry place away from sunlight.
3. Exposing your item to excessive heat or humidity may damage your item.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment of and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help. Singsong International Trade Co.,Limited, Call us (1-800) 496-7105 or email us at vipservice@singsong.com.cn

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

TECHNICAL DATA

Input: 120V AC 50/60Hz
Output: 5.9 V DC 2.0 A